

Turning Equipment On

Turn on in any order:

1. Computer
2. Document Camera
3. VCR
4. Video Projector
5. Sound Amplifier

Switching Between Sources:

NOTE: All audio is controlled with the Sound amplifier.

From Computer to VCR:

1. Switch Video Projector to “*Video*” with the “**Input**” button on the Projector remote (the silver one with “Sanyo” on it).
2. Switch Sound Amplifier to “*VCR*” with the switch next to the Volume knob.

From VCR to Computer:

1. Switch Video Projector to “*Computer*” with the “**Input**” button on the Projector remote.
2. Switch Sound Amplifier to “*Computer*” with the switch next to the Volume knob.

Turning Equipment Off

Turn off in any order:

1. Sound Amplifier
2. Video Projector – (press the “On/Off” button on the remote twice)
3. VCR
4. Document Camera
5. Computer

In case of emergency, call Media Services at x3295.