

Turning Equipment On

Turn on in any order:

1. Document Camera
2. Computer
3. VCR/DVD
4. Video Projector
5. Sound Amplifier/Speakers

Switching Between Sources:

From Computer to VCR, DVD, or Document Camera:

1. (To VCR) Switch Projector to "Video" with the "**Video**" button on the remote to the Projector.
2. (To DVD) With Projector on "Video," switch VCR to "L-1" with the "Channel Up/Down" buttons on the front of the VCR
3. (To Document Camera) Switch Projector to "S-Video" with the "**Video**" button on the remote to the Projector

From VCR, DVD, or Document Camera to Computer:

Switch Video Projector to "Computer 1" with the "**Computer**" button on the Projector remote.

Turning Equipment Off

Turn off in any order:

1. Sound Amplifier
2. Video Projector
3. VCR/DVD
4. Computer
5. Document Camera

In case of emergency, call Media Services at x3295.