

Turning Equipment On

Turn on in any order:

1. Computer
2. Document Camera
3. Video Projector
4. Sound Amplifier

Switching Between Sources:

From Computer to Document Camera

With Projector on “*Computer*,” press “**Int/Ext**” on Document Camera.

From Document Camera to Computer

With Projector on “*Computer*” Press “**Int/Ext**” on Document Camera.

Use the TV/VCR hanging in the corner to watch videos

Turning Equipment Off

Turn off in any order:

1. Video Projector
2. Document Camera
3. Computer
4. Sound Amplifier

In case of emergency, call Media Services at x3295.