

Turning Equipment On

Turn on in any order:

1. Document Camera
2. Computer
3. VCR/DVD
4. Video Projector
5. Sound Amplifier/Speakers

Switching Between Sources:

(NOTE: Computer runs through Document Camera. Document Camera *must* be on to see Computer)

From Computer or Document Camera to VCR/DVD:

1. (To VCR) Switch Projector to "Video" with the "**Video**" button on the remote to the Projector.
2. (To DVD) With Projector on "Video," switch VCR/DVD Player to "DVD" with the "**DVD**" button on the VCR/DVD Player remote

From VCR/DVD to Computer or Document Camera:

1. (To Document Camera) With Document Camera on "*Internal*," switch Video Projector to "*Computer 1*" with the "**Computer**" button on the remote to the Projector.
2. (To Computer) With Projector on "*Computer 1*," switch Document Camera to "*Ext 1*" with the "**Int/Ext**" button on the front of the Document Camera.

Turning Equipment Off

Turn off in any order:

1. Sound Amplifier
2. Video Projector
3. VCR/DVD
4. Computer
5. Document Camera

In case of emergency, call Media Services at x3295.