

1503A

Turning Equipment On

Turn on in any order:

1. Document Camera
2. Computer
3. VCR
4. Video Projector
5. Sound Amplifier/Speakers

Switching Between Sources:

(NOTE: Computer runs through Document Camera. Document Camera *must* be on to see Computer)

From Computer to VCR or Document Camera:

1. (To VCR) Switch Projector to "Video" with the "**Input**" button on the remote to the Projector.
2. (To Document Camera) With Projector on "Video," switch VCR to "LI" with the "**Channel UP/Down**" buttons on the front of the VCR

From VCR or Document Camera to Computer:

1. Switch Video Projector to "Computer" with the "**Input**" button on the remote to the Projector.

Turning Equipment Off

Turn off in any order:

1. Sound Amplifier
2. Video Projector
3. VCR
4. Computer
5. Document Camera

In case of emergency, call Media Services at x3295.